

# LD-1

CHEST PRESS/PEC FLY

# OWNER'S MANUAL



SERIAL NUMBER HERE

DATE OF PURCHASE



### INSTRUCTIONS

CONGRATULATIONS ON THE PURCHASE OF YOUR NEW BATCA LD-1. THIS GYM WILL PROVIDE YOU WITH A LIFETIME OF ENJOYMENT TO MEET YOUR STRENGTH TRAINING NEEDS. BATCA FITNESS SYSTEMS STRIVES TO BUILD THE BEST QUALITY GYMS AND TO PACKAGE THESE GYMS IN SUCH A WAY TO AVOID ANY DAMAGE DURING SHIPPING.

In order to get started with your assembly you should first familiarize yourself with this manual. It is recommended that you read through each step thoroughly before you begin. Begin by opening your boxes and separating all of your parts. Verify that all parts are accounted for and have no damage. When all parts are accounted for, you may begin your assembly. Some items may have been pre-assembled for your convenience. Please note that hardware quantities shown reflect total quantities for your gym and may not reflect actual quantities in each bag. Assemble your gym on a solid level surface. This will ensure the best possible performance, function, and safety for the gym and your workout.

Assemble your gym according to the step by step instructions found in this manual. Failure to do so will void your warranty and may result in personal injury. After assembly, you should check each station to ensure correct operation. If a problem arises, recheck your assembly with these instructions to verify correct assembly. If you are unable to correct a problem or have questions with your assembly please contact your authorized Batca dealer.

## WARNING

BATCA FITNESS SYSTEMS HAS BUILT THIS GYM TO GIVE YOU A SAFE, EFFECTIVE AND ENJOYABLE WORKOUT. HOWEVER, THERE IS A RISK ASSUMED BY INDIVIDUALS WHO USE THIS TYPE OF EQUIPMENT. IT IS VERY IMPORTANT THAT ALL WARNINGS AND INSTRUCTIONS ARE READ AND FOLLOWED BEFORE BEGINNING ANY EXERCISE PROGRAM.

IT IS ALSO VERY IMPORTANT TO READ AND FOLLOW THE PREVENTATIVE MAINTENANCE SCHEDULE DESCRIBED IN THIS MANUAL. IF ANY OF THE WARNING LABELS OR STICKERS ARE WORN, FADED, TORN, SCRATCHED OR MISSING THEY SHOULD BE REPLACED IMMEDIATELY.

<u>WARNING</u>: There is a risk assumed by individuals who use this type of equipment. To minimize risk always follow these rules.

- 1) IT IS ESSENTIAL THAT YOU CONSULT WITH YOUR PHYSICIAN BEFORE BEGINNING ANY EXERCISE PROGRAM.
- 2) INSPECT EQUIPMENT BEFORE EACH USE FOR LOOSE, WORN, OR FRAYED PARTS (INCLUDING CABLES, NUTS AND BOLTS). REPLACE PARTS AT FIRST SIGNS OF WEAR (USE ONLY GENUINE BATCA REPLACEMENT PARTS). USE OF EQUIPMENT THAT IS DAMAGED, WORN, FRAYED OR NOT COMPLETELY ASSEMBLED ON A SOLID, LEVEL SURFACE MAY RESULT IN INJURY.
- 3) Make sure all adjustment pins are fully engaged before using equipment.
- 4) KEEP ALL PARTS OF THE BODY AND CLOTHING OUTSIDE THE PATH OF ANY MOVING PARTS OF THE GYM. BE ALERT TO THE POSSIBILITY OF INJURY. DO NOT BE CARELESS.
- 5) Minors and children should not be allowed to play on or around this gym.

## TABLE OF CONTENTS

	<u>Page</u>		<u>Page</u>
Instructions	2	FINAL ASSEMBLY AND TROUBLESHOOTING	21
Parts Listing	3	Cable Tension and Adjustments	22
HARDWARE COMPARISON	4-7	MAINTENANCE	23
MAIN ASSEMBLY	8-20	Warranty	24
UPHOLSTERY	18	FLOOR PLAN LAYOUT	25
CABLE ROUTING	15-17		

## FRAME COMPONENTS

ITEM	PART NUMBER	DESCRIPTION	QTY.
NO.			
1	BFP-10824	LD-1 Cage	1
2	BFP-10823	Base Assembly	1
3	BFP-10828	Upright Support	1
4	BFP-10829	PEC TOP ASSEMBLY	1
5	BFP-10839	Cable Lockout Plate	1
6	BFP-51745	Guide Rod	Z
7	BFP-10827	Guide Rod Plate	1
8	BFP-51719	ANTI-DEFLECTION PLATE	1
9	BFM-10413	WEIGHT STACK TOP PLATE	1
1 🗆	BFM-50632	WEIGHT STACK PLATE	19
11	BFM-50529	Rubber Donut	2
12	BFP-10834	Pec Cam (Right)	1
13	BFP-10833	Pec Cam (Left)	1
14	BFP-10830	Upper Pec Arm (Right)	1
15	BFP-10831	Upper Pec Arm (Left)	1
16	BFP-10832R	RIGHT LOWER PEC ARM	1
16a	BFP-10832L	LEFT LOWER PEC ARM	1
17	BFP-51736	Axle	2
18	BFP-10825	FOOT ASSIST ASSEMBLY	1
19	BFP-51699	Axle	1
20	BFP-10826	CHEST PRESS ARM	1
21	BFP-10837	CHEST PRESS PULLEY HOLDER	1
22	BFP-10836	Chrome Adjustment Tube	1
23	BFP-10838	FREE FLOATER	2
24	BFM-50345	Pulley Cover	2
25	BFP-51711	Placard Plate	1
26	BFP-51740	REAR WEIGHT STACK SHROUD	1
27	BFP-51742	FRONT WEIGHT STACK SHROUD (RIGHT)	1
28	BFP-51741	FRONT WEIGHT STACK SHROUD (LEFT)	1

	CABLES			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.	
29	CAB-15000	WEIGHT STACK TO FREE FLOATER	1	
30	CAB-15002	PEC TOP TO FREE FLOATER	1	
31	CAB-15001	FREE FLOATER TO FREE FLOATER	1	

## **ACCESSORIES**

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
32	BFM-51173	Magnetic Weight Stack Pin	1

## UPHOLSTERY

ITEM	PART NUMBER	DESCRIPTION	QTY.
NO.			
33	BFP-52137	HEAD PAD	1
34	BFP-52136	Back Pad With Lumber	1
35	BFP-52141	Воттом Pad	1

## **HARDWARE**

ITEM NO.	PART NUMBER	DESCRIPTION	QTY
36	BFH-50173	3 1/2" Pulley	3
37	BFH-50174	4 1/2" PULLEY	6
38	BFH-50530	5" PULLEY	1
39	BFP-51746	1/2" Pulley Spacer	8
40	BFP-51696	Small Aluminum Cap	4
41	BFH-50210	GAS SPRING	1
42	BFH-50254	HCS 3/8" x 3/4"	2
43	BFP-52373	BHSCS 3/8" x 3/4"	6
44	BFP-51653	SHCS 3/8" x 1 1/4"	2
45	BFH-50351	1 3/8" Shoulder Bolt	3
46	BFP-51759	SHCS 3/8" x 2"	1
47	BFP-51752	SHC5 3/8" x 2 1/4"	7
48	BFP-51750	SHC5 3/8" x 2 3/4"	13
49	BFP-51748	SHC5 3/8" x 3 1/4"	2
50	BFP-51760	SHC5 3/8" x 3 1/2"	2
51	BFP-51884	SHC5 3/8" x 4 1/4"	2
52	BFP-51799	SHCS 3/8" X 5"	4
53	BFP-51756	SHC5 3/8" x 5 1/4"	4
54	BFH-50267	5/16" Nylock	3
55	BFH-50147	3/8" Lock Washer	6
56	BFH-50146	3/8" Flat Washer	60
57	BFH-50157	3/8" NyLock	31
58	BFH-50204	3/8" Curved Washer	1 🗆
49	BFM-50620	BHSCS 3/8" x 1"	2

## TOOLS REQUIRED

- 9/16" WRENCH
- 9/16" RATCHET
- ALLEN WRENCH SET
- TAPE MEASURE



3/8" SOCKET HEAD CAP SCREW (SIZES LISTED IN CHART)



PART #	BOLT SIZE
BFP-52340	3/8" x 3/4"
BFP-52376	3/8" X 1"
BFP-51653	3/8" x 1 1/4"
BFP-51697	3/8" x 1 1/2"
BFP-51759	3/8" x 2"
BFP-51752	3/8"×2 1/4"
BFP-51750	3/8"×2 3/4"
BFP-51747	3/8" x 3"
BFP-51748	3/8" x 3 1/4"
BFP-51760	3/8" x 3 1/2"
BFP-52345	3/8" x 4"
BFP-51884	3/8" X 4 1/4"
BFP-51751	3/8"×4 1/2"
BFP-51753	3/8"×4 3/4"
BFP-51799	3/8" x 5"
BFP-51756	3/8" x 5 1/4"
BFP-52364	3/8" x 6"

PART #	BOLT SIZE
BFH-50144	FHSCS 3/8"-16 x 1"
BFP-52377	FHSCS 3/8" x 2"
BFH-50145	FHSCS 3/8"-16 x 2 1/4"
BFP-52374	FHSCS 3/8" x 2 3/4"




HEX HEAD CAP SCREW  $(HCS) 3/8" \times 3/4"$ (BFH-50254)



BUTTON HEAD SOCKET CAP SCREW (BHSCS) 3/8" x 3/4" BFP-52430



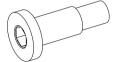



1 1/4" SHOULDER BOLT BFH-50250

ZINC PLATED SHCS 5/16" x 1/2" (BFP-52372)



5/16"-18 NYLOCK BFH-50267



3/8"-16 THIN NYLOCK BFH-50247



3/8"-16 NYLOCK 1/2"-13 NYLOCK BFH-50157 BFH-50251








1/2" JAM NUT BFH-50256




3/8" JAM NUT BFH-50149

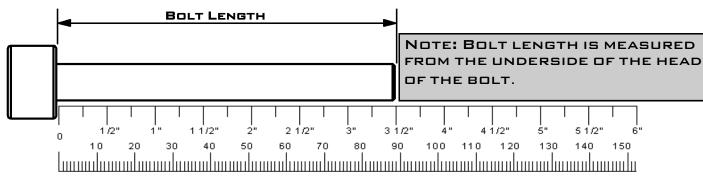

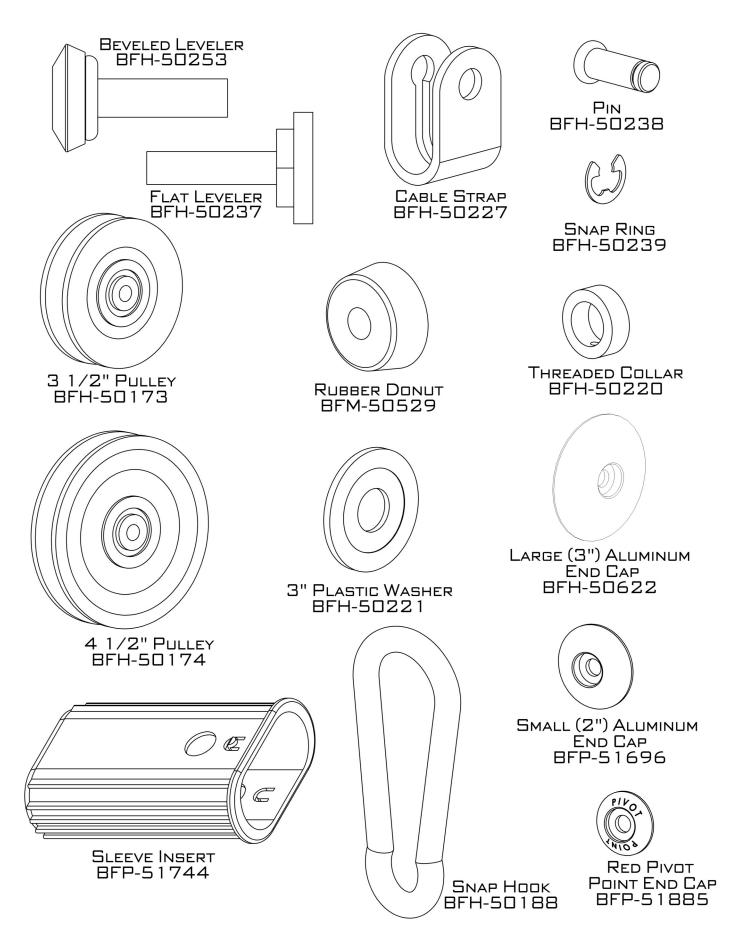

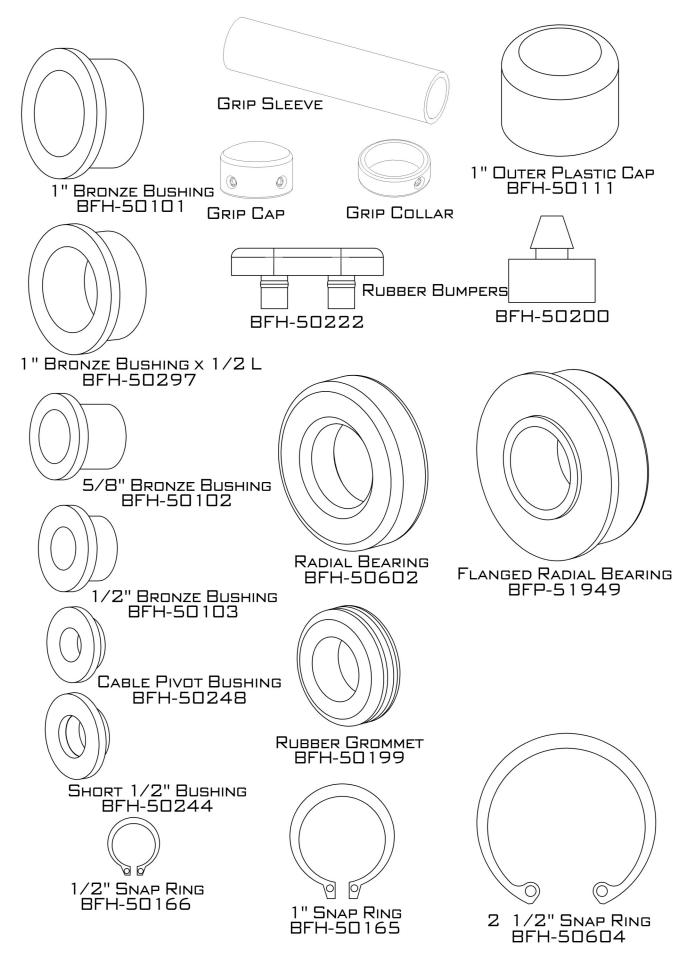

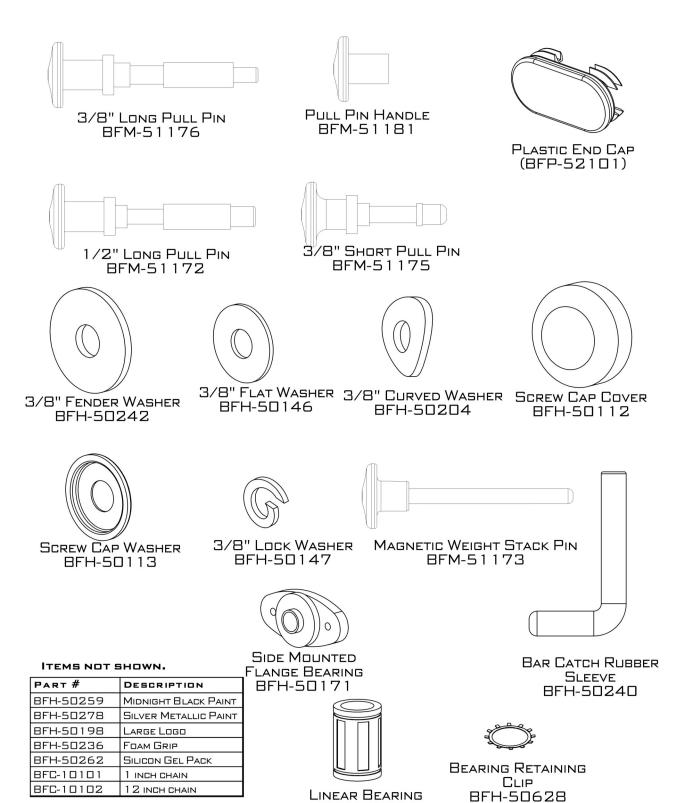

BFH-50627




# PLEASE FOLLOW ALL DIRECTIONS VERY CAREFULLY FOR PROPER INSTALLATION.


#### STEP 1:




Note: For a more consistent appearance, position all bolts in the direction shown in each figure.

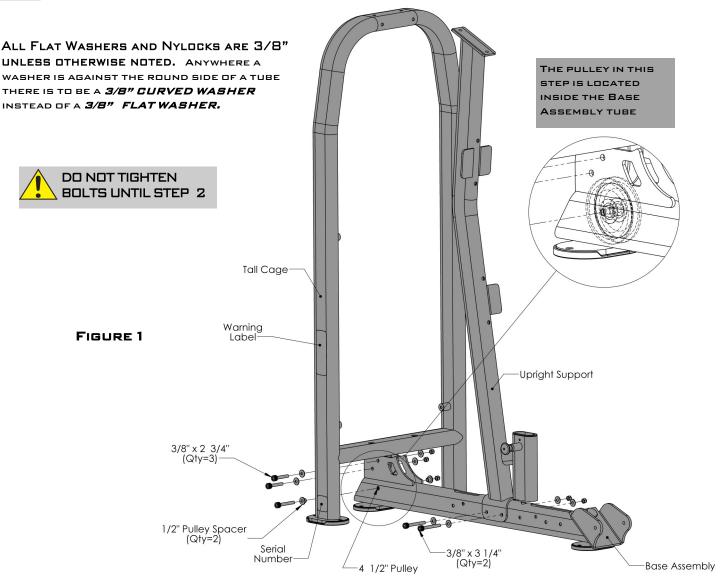

ITEM#	PART#	DESCRIPTION	QTY
1	BFP-10824	LD-1 Cage	1
2	BFP-10823	BASE ASSEMBLY	1
3	BFP-10828	Upright Support	1
37	BFH-50174	4 1/2" Pulley	1
48	BFP-51750	SHCS 3/8" x 2 3/4"	3
49	BFP-51748	SHCS 3/8" x 3 1/4"	2
39	BFP-51746	1/2" Pulley Spacer	2
56	BFH-50146	3/8" FLAT WASHER	8
57	BFH-50157	3/8" NyLock	5

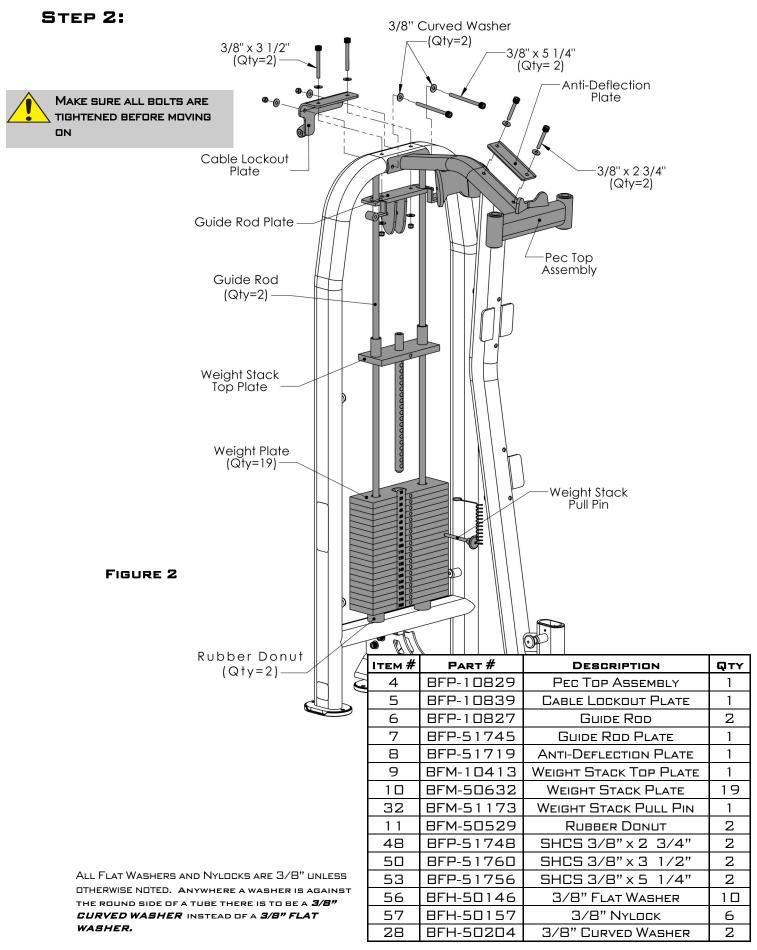


#### STEP 3:

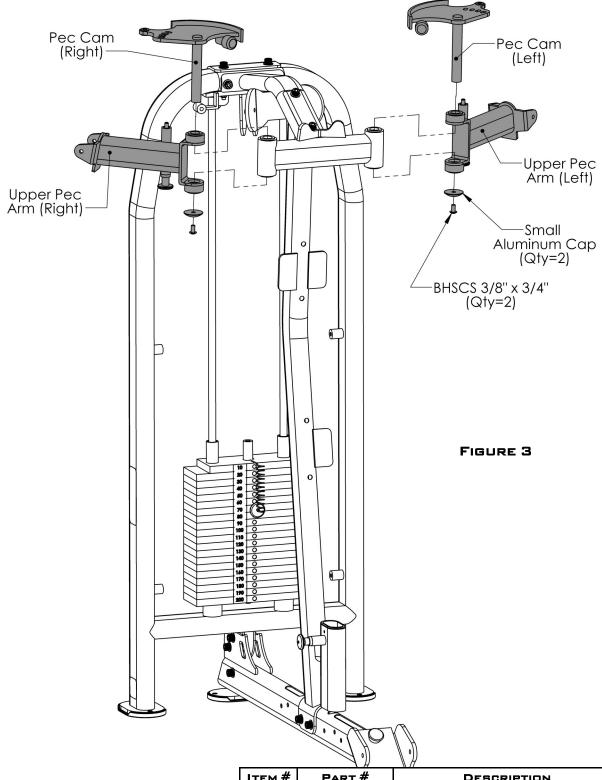


ІТЕМ#	PART#	DESCRIPTION	QΤΥ
12	BFP-10834	Pec Cam (Right)	1
13	BFP-10833	Pec Cam (Left)	1
14	BFP-10830	Upper Pec Arm (Right)	1
15	BFP-10831	Upper Pec Arm (Left)	1
40	BFP-51738	Small Aluminum Cap	2
43	BFP-52373	BHSCS 3/8" x 3/4"	2

#### STEP 4:

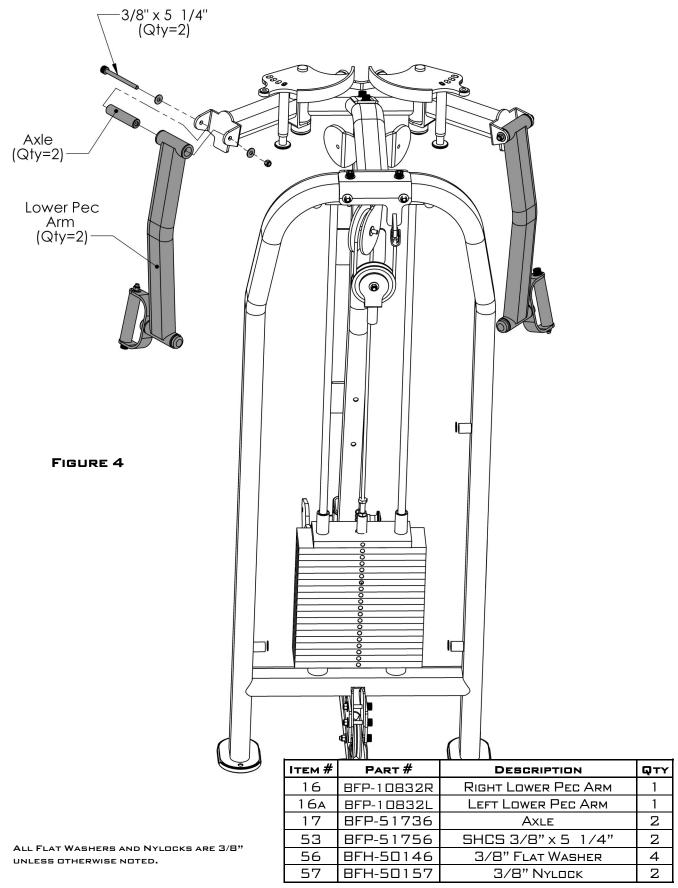


#### STEP 5:

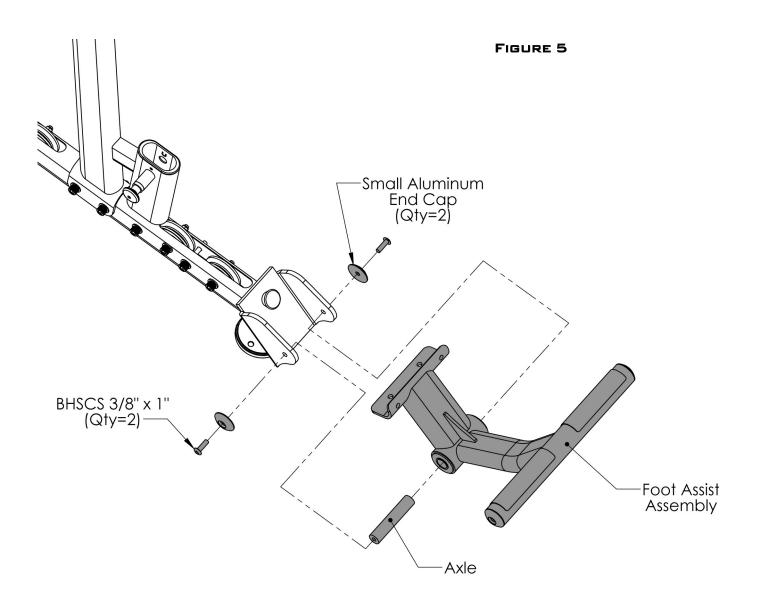

ITEM#	PART#	DESCRIPTION	QTY
18	BFP-10825	FOOT ASSIST ASSEMBLY	1
19	BFP-51699	Axle	1
40	BFP-51696	SMALL ALUMINUM END CAP	2
49	BFM-50620	BHSCS 3/8" x 1"	2


#### STEP 6:

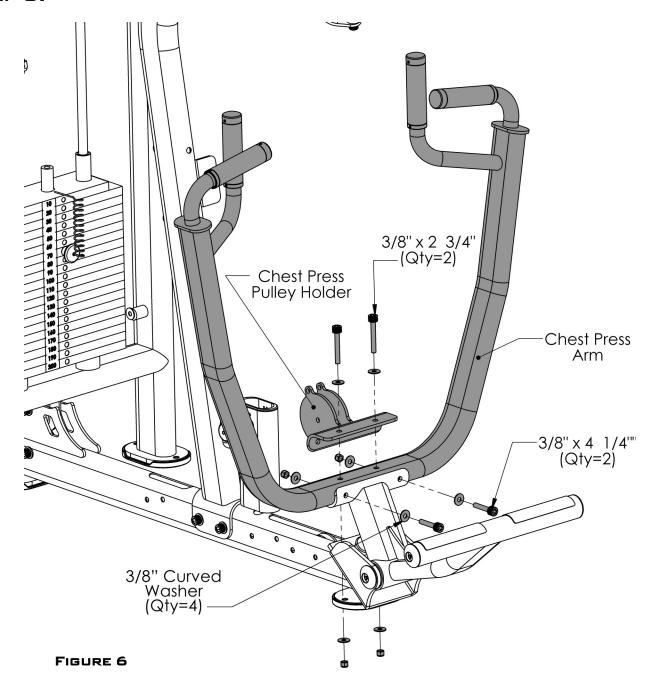

ALL FLAT WASHERS AND NYLOCKS ARE 3/8" UNLESS OTHERWISE NOTED. ANYWHERE A WASHER IS AGAINST THE ROUND SIDE OF A TUBE THERE IS TO BE A 3/8" CURVED WASHER INSTEAD OF A 3/8" FLAT WASHER.


	ІТЕМ#	PART#	DESCRIPTION	QΤΥ
	20	BFP-10826	CHEST PRESS ARM	1
	21	BFP-10837	CHEST PRESS PULLEY HOLDER	1
	48	BFP-51750	SHCS 3/8" x 2 3/4"	2
	51	BFP-51884	SHCS 3/8" x 4 1/4"	2
Г	56	BFH-50146	3/8" FLAT WASHER	4
	57	BFH-50157	3/8" NyLock	4
	58	BFH-50204	3/8" Curved Washer	4

#### STEP 7:

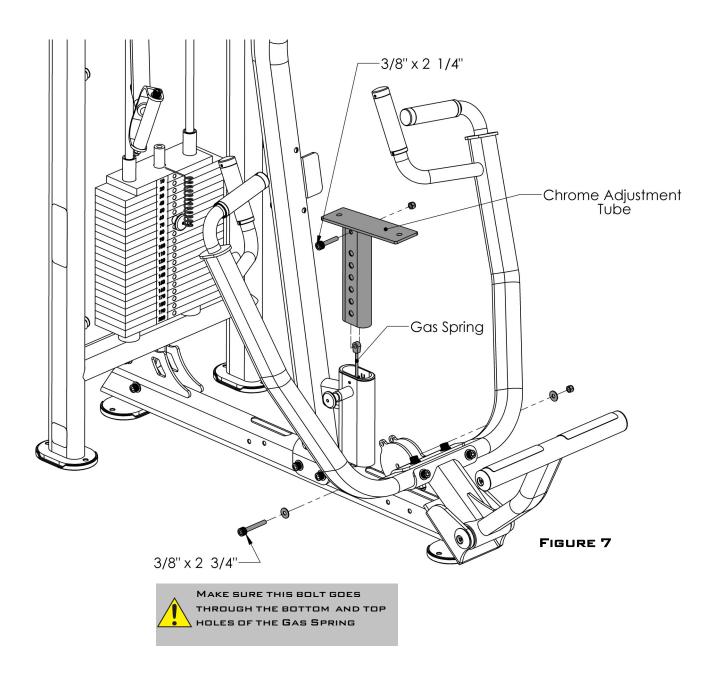



	ITEM#	PART#	DESCRIPTION	QTY
	22	BFP-10836	Chrome Adjustment Tube	1
	41	BFH-50210	Gas Spring	1
ſ	46	BFP-51759	SHCS 3/8" x 2 1/4"	1
	48	BFP-51750	SHCS 3/8" x 2 3/4"	1
	56	BFH-50146	3/8" FLAT WASHER	2
	57 BFH-50157		3/8" Nylock	2

#### STEP 8:

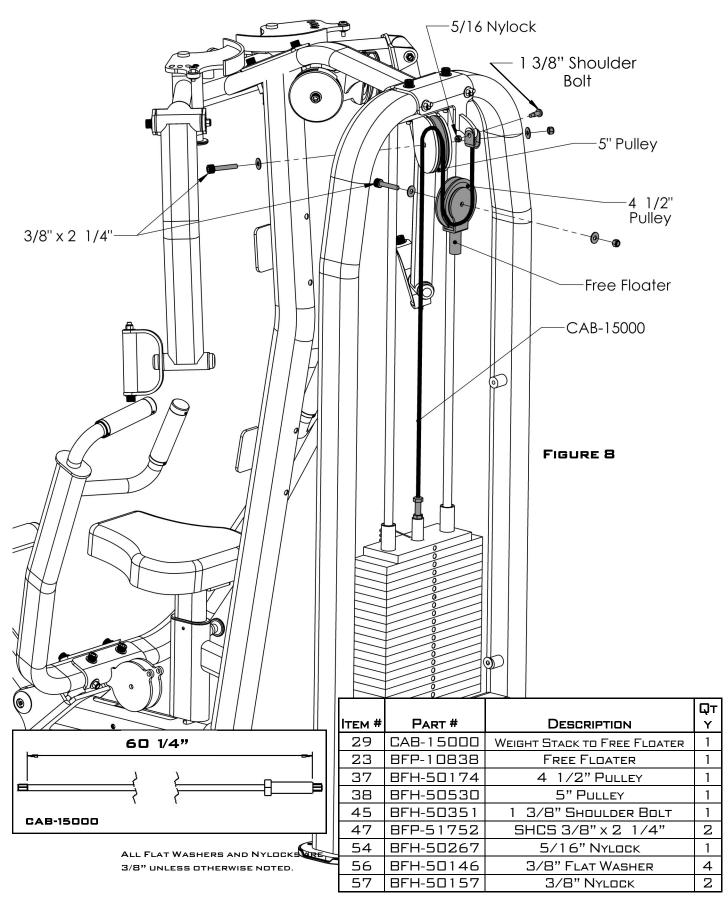



#### STEP 9:

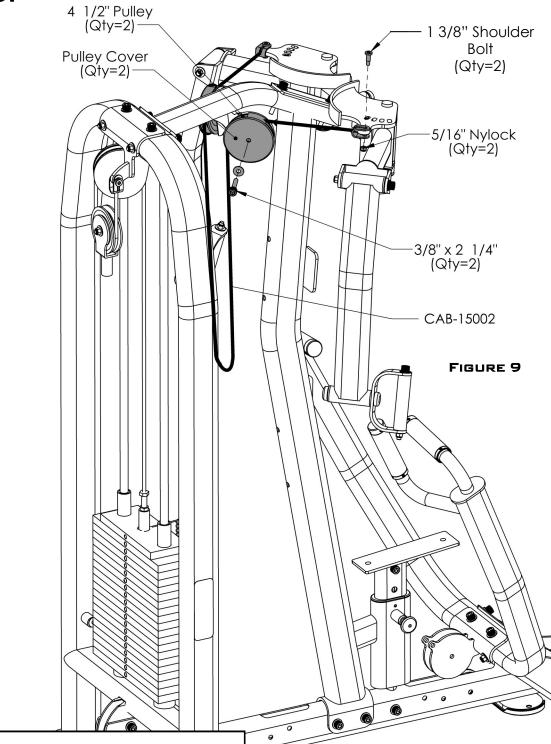

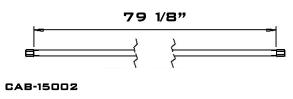

ITEM#	PART#	ART# DESCRIPTION			
30	CAB-15002	PEC TOP TO FREE FLOATER	1		
24	BFM-50345	Pulley Cover	2		
37	BFH-50174	4 1/2" Pulley	2		
45	BFH-50351	1 3/8" SHOULDER BOLT	2		
47	BFP-51752	SHC5 3/8" X 2 1/4"	2		
54	BFH-50267	5/16" NyLock	2		
56	BFH-50146	3/8" Flat Washer	4		
57	BFH-50157	3/8" Nylock	2		

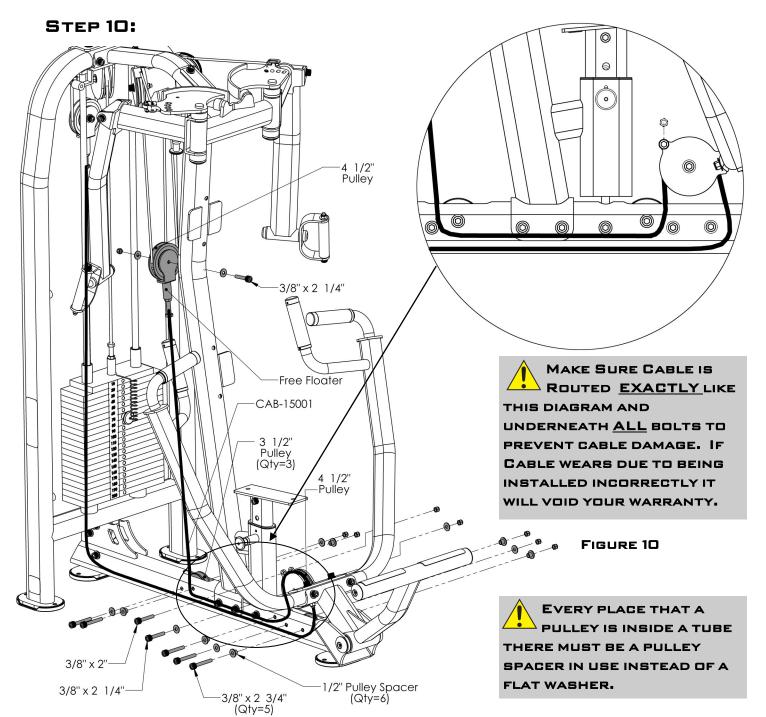


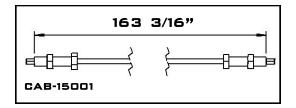

ALL FLAT WASHERS AND NYLOCKS ARE 3/8" UNLESS OTHERWISE NOTED.


ITEM#	PART#	DESCRIPTION	QΤΥ
		FREE FLOATER TO FREE FLOATER	
31	CAB-15001	Cable	1
23	BFP-10838	FREE FLOATER	1
36	BFH-50173	3 1/2" Pulley	3
37	BFH-50174	4 1/2" Pulley	2
39	BFP-51746	1/2" Pulley Spacer	6
46	BFP-51759	SHCS 3/8" x 2"	1
47	BFP-51752	SHC5 3/8" X 2 1/4"	2
48	BFP-51750	SHCS 3/8" x 2 3/4"	5
56	BFH-50146	3/8" FLAT WASHER	8
57	BFH-50157	3/8" NyLock	8

#### **STEP 11:**

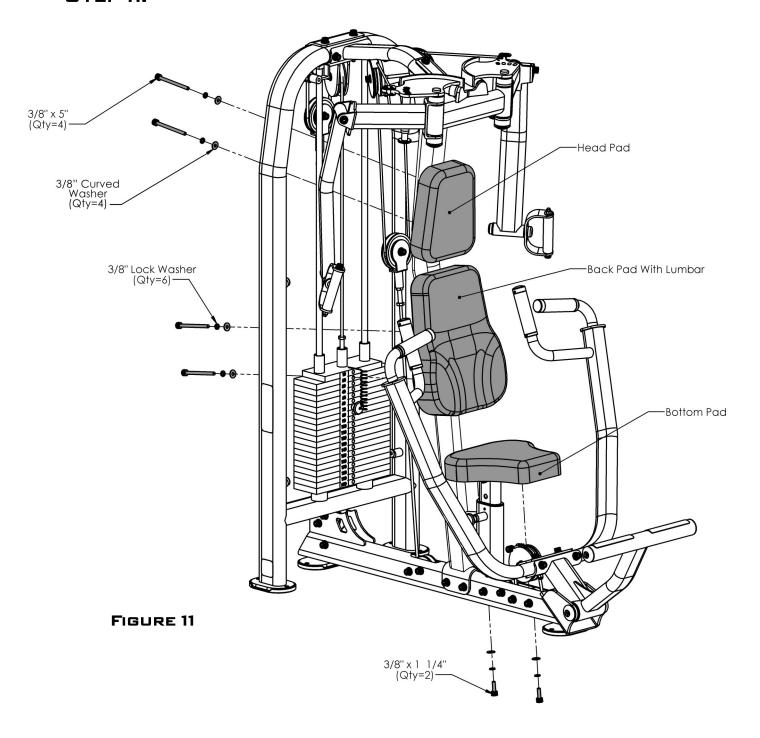


ITEM#	PART# DESCRIPTION				
33	BFP-52137	HEAD PAD	1		
34	BFP-52136	BACK PAD WITH LUMBAR	1		
35	BFP-52141	Воттом Pad	1		
44	BFP-51653	SHCS 3/8" x 1 1/4"	2		
52	BFP-51799	SHCS 3/8" X 5"	4		
55	BFH-50147	3/8" Lock Washer	6		
56	BFH-50146	3/8" FLAT WASHER	2		
58	BFH-50204	3/8" Curved Washer	4		

#### **STEP 12:**

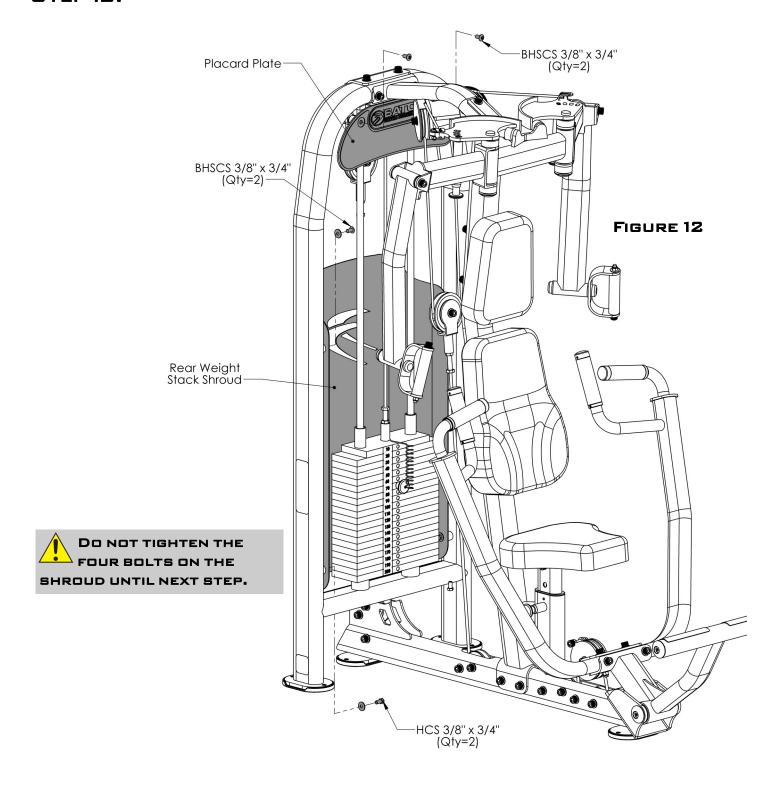

ITEM#	PART#	DESCRIPTION			
25 BFP-51711		Placard Plate	1		
26 BFP-51740 REAR WEIGHT STACK SHROUD		1			
42 BFH-50254 HCS		HCS 3/8" x 3/4"	2		
43	BFP-52373	BHSCS 3/8" x 3/4"	4		
56	BFH-50146	3/8" FLAT WASHER	4		


#### **STEP 13:**

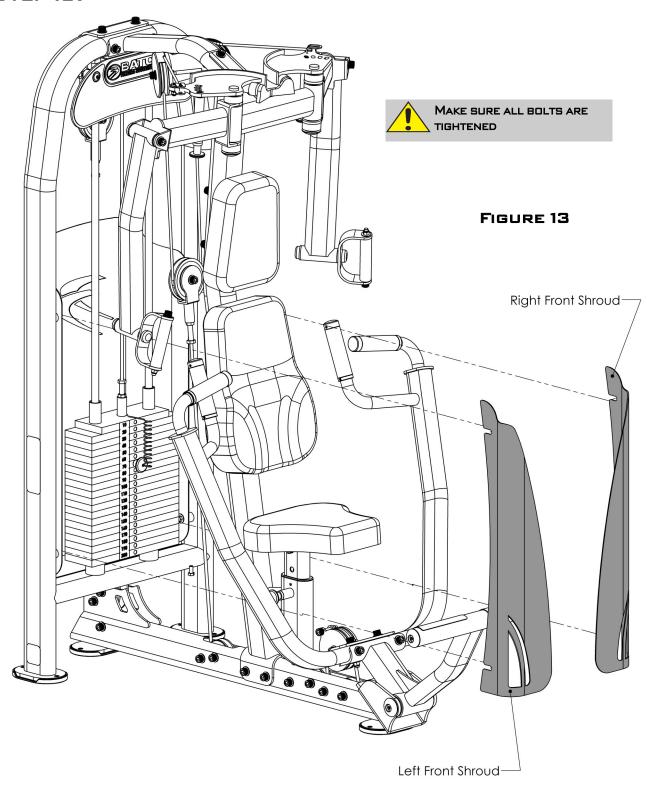


ITEM#	PART#	DESCRIPTION	QTY
27	BFP-51742	FRONT WEIGHT STACK SHROUD (RIGHT)	1
28	BFP-51741	FRONT WEIGHT STACK SHROUD (LEFT)	1

## FINAL ASSEMBLY AND TROUBLESHOOTING


#### **WEIGHT STACK DECALS:**

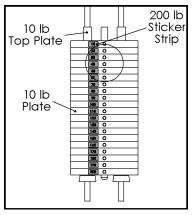



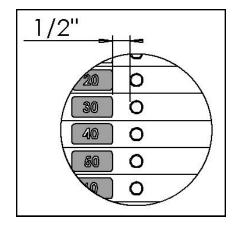


#### IMPORTANT - CHECK THESE COMPONENTS BEFORE USING GYM:

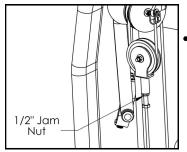


FREE FLOATER

EACH CABLE WITH A THREADED BOLT ON EITHER END MUST BE THREADED AT LEAST 1/2" INTO ITS ATTACHMENT, WHETHER IT BE A FREE FLOATER, LOCKOUT FREE FLOATER, OR THE TOP PLATE OF THE WEIGHT STACK. EACH MUST ALSO BE SECURED WITH A 1/2" JAM NUT TO ENSURE A SAFE AND PROPER CONNECTION.

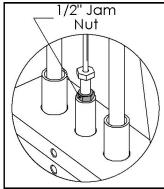

TOP PLATE

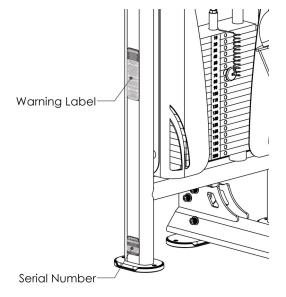

• RECORD YOUR SERIAL NUMBER ON THE FRONT OF THIS MANUAL AND KEEP FOR YOUR RECORDS. THE SERIAL NUMBER CAN BE FOUND ON THE SIDE OF THE CAGE AS SEEN IN THE FIGURE TO THE LEFT.

#### GUIDE ROD

 CLEAN GUIDE RODS WITH A LINT-FREE CLOTH AND APPLY A THIN LAYER OF SILICONE LUBRICANT (PART # BFH-50262) TO EACH GUIDE ROD. THIS WILL ENSURE A GLASS SMOOTH PERFORMANCE FROM YOUR WEIGHT STACK.


## CABLE ADJUSTMENTS

ADJUST CABLES TO PROPER TENSION FROM ANY OF THE LOCATIONS SHOWN BELOW.



Note: All cables with threaded adjustable ends must have at least 1/2" of the threads threaded in to its counterpart. It is very important that the 1/2" Jam Nut be wrench tightened to the counterpart to ensure that the threaded adjustable end of the cable does not back out of its counterpart.

• <u>Note:</u> If the top plate raises off of the second plate in the weight stack, then the cable tension is too tight. You will need to take some of the tension out to lower the Top plate flush with the second plate.

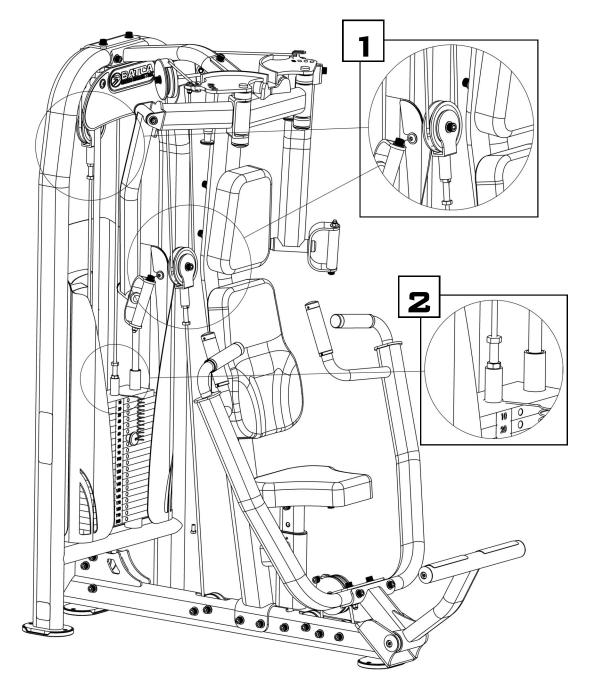

## PREVENTIVE MAINTENANCE

BATCA FITNESS SYSTEMS STRIVES TO GIVE YOU THE VERY BEST IN QUALITY, PERFORMANCE AND SAFETY THROUGH CAREFULLY ENGINEERED DESIGNS AND EXCELLENT WORKMANSHIP. IN ORDER TO MAINTAIN THIS HIGH LEVEL OF QUALITY THE PREVENTATIVE MAINTENANCE SCHEDULE BELOW SHOULD BE FOLLOWED.

CLEAN UPHOLSTERY, GRIPS, AND ROLLER PADS WITH MILD SOAP AND WATER GENERALLY AFTER EVERY USE. THE GUIDE RODS, CHROME SLIDES AND FRAME SHOULD BE CLEANED WITH A COTTON CLOTH. UPON CLEANING THE GUIDE RODS, A THIN LAYER OF SILICONE OR TEFLON GEL SHOULD BE APPLIED TO EACH ROD TO ENSURE A GLASS SMOOTH PERFORMANCE.

AN OVERALL INSPECTION SHOULD BE DONE BEFORE EACH WORKOUT. IF THE WARNING AND SAFETY DECALS ARE WORN OR HAVE BEEN REMOVED THEY SHOULD BE REPLACED IMMEDIATELY. THE CABLES AND CABLE SYSTEMS SHOULD BE INSPECTED FOR SIGNS OF WEAR AND PROPER TENSION. IN ORDER TO CHECK CABLES PROPERLY YOU SHOULD CAREFULLY RUN THE CABLE THROUGH YOUR FINGERTIPS, CHECKING FOR SIGNS OF WEAR, CRACKS, BURS AND THINNING SPOTS. REPLACE ANY PART AT FIRST SIGNS OF WEAR. CABLES SHOULD BE ADJUSTED FOR PROPER TENSION. SEE ASSEMBLY INSTRUCTIONS FOR THIS DETAIL. ALL HARDWARE, STOPS, AND ADJUSTMENTS SHOULD BE CHECKED AND TIGHTENED AS REQUIRED.

The guide rods on your machine should be cleaned and lubricated regularly. This will ensure a glass smooth performance from your weight stack. A thin layer of either Silicone or Teflon gel should applied to each rod. Each pillow block bearing and flange bearing has a grease fittings that must be lubricated regularly. Use general purpose bearing grease and follow the schedule below.

ALTHOUGH CABLES SHOULD BE INSPECTED DAILY, IT IS IMPORTANT THAT ALL CABLES BE REPLACED AS DIRECTED IN THE SCHEDULE BELOW. PLEASE NOTE THAT AT ANY FIRST SIGN OF WEAR THE CABLE SHOULD BE REPLACED IMMEDIATELY.

IF THERE ARE ANY QUESTIONS CONCERNING MAINTENANCE, PLEASE CONTACT YOUR LOCAL BATCA DEALER OR CONTACT BATCA FITNESS SYSTEMS DIRECTLY AT:

BATCA FITNESS SYSTEMS (919) 255-1233

WWW.BATCAFITNESS.COM

	DAIL	DAILY		WEEKLY		MONTHLY		QUARTERLY		YEARS	
	Commercial	Home	Commercial	Home	Commercial	Home	Commercial	Home	Commercial	Home	
CLEAN											
UPHOLSTERY	X			Х							
HAND GRIPS	Х			Χ							
Roller Pads	Х			X							
Guide Robs			Χ			X					
CHROME SLIDES			Х			Х					
FRAME			Х			Х					
INSPECT											
□verall	Х	Χ									
SAFETY DECALS	Х	Χ									
Cables	Х	Х									
Cable Tension			Χ			Х					
Pulleys	Х	Х									
Hardware	Х	Х									
Stops	Х	Χ									
UPHOLSTERY	Х	Х									
HAND GRIPS			Χ			Х					
FRAME			Χ			Х					
Bushings	Х			Х							
Bearings	Х			Χ							
LUBRICATE											
Guide Robs			Χ			Х					
Bearings	,						As Needed			1	
REPLACE											
Cables									1	3	

## LIMITED LIFETIME WARRANTY

#### WHAT IS COVERED

#### FOR RESIDENTIAL USE:

BATCA FITNESS SYSTEMS WARRANTS ALL OF ITS PRODUCTS AGAINST DEFECTS IN MANUFACTURING, MATERIALS AND WORKMANSHIP UNDER NORMAL USE AND SERVICE FOR ONE YEAR FROM DATE OF PURCHASE INCLUDING PAINT, CHROME, UPHOLSTERY AND GRIPS. BATCA FITNESS SYSTEMS ALSO WARRANTS ALL CABLES, BELTS, BOLTS, NUTS, CAPS, PLUGS, BUMPERS, WASHERS, LEVELERS, DECALS, GAS SPRINGS AND OTHER HARDWARE FOR THREE YEARS AFTER DATE OF PURCHASE; ALL MOVING PARTS, INCLUDING PULLEYS, BUSHINGS, BEARINGS AND PULL PINS FOR FIVE YEARS AFTER DATE OF PURCHASE AND WARRANTS THE FRAME AND ALL WELDED PARTS FOR THE LIFETIME OF THE DRIGINAL PURCHASER.

#### FOR COMMERCIAL USE:

BATCA FITNESS SYSTEMS WARRANTS ALL OF ITS PRODUCTS AGAINST DEFECTS IN MANUFACTURING, MATERIALS AND WORKMANSHIP UNDER NORMAL USE AND SERVICE FOR SIX MONTHS FROM DATE OF PURCHASE INCLUDING PAINT, CHROME, UPHOLSTERY AND GRIPS. BATCA FITNESS SYSTEMS ALSO WARRANTS ALL CABLES, BELTS, BOLTS, NUTS, CAPS, PLUGS, BUMPERS, WASHERS, LEVELERS, DECALS, GAS SPRINGS AND OTHER HARDWARE FOR ONE YEAR AFTER DATE OF PURCHASE; ALL MOVING PARTS, INCLUDING PULLEYS, BUSHINGS, BEARINGS AND PULL PINS FOR THREE YEARS AFTER DATE OF PURCHASE AND WARRANTS THE FRAME AND ALL WELDED PARTS FOR TEN YEARS AFTER DATE OF PURCHASE.

#### WHAT IS NOT COVERED

This warranty does not cover damage, which results from shipping, misuse, abuse, neglect, carelessness, modification or alteration, accident, fire, flood, "acts of God" or other contingencies beyond the control of Batca Fitness Systems. This warranty also does not cover deterioration from wear and tear or exposure or any defect, which would not have happened if instructions in the owner's manual had been followed. Improper installation, improper assembly or follow-up maintenance along with installation of parts or accessories not originally intended for products of Batca Fitness Systems are also not covered by this warranty. Only genuine Batca parts should be used for replacement, repair, and maintenance for this warranty to apply.


DEFECTIVE PARTS WILL BE REPAIRED OR REPLACED AT BATCA FITNESS SYSTEMS OPTION, WITHOUT PARTS CHARGE TO THE PURCHASER. ALL RETURNS REQUIRE A RETURN AUTHORIZATION PRIOR TO ACCEPTANCE OF REPAIR WORK. BATCA FITNESS SYSTEMS RESERVES THE RIGHT TO MAKE DESIGN CHANGES WITHOUT ANY PRIOR NOTIFICATION AND SHALL NOT BE RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.


THE PURCHASER IS RESPONSIBLE FOR SHIPPING THE DEFECTIVE PART BACK TO THE FACTORY. REPAIR OR REPLACEMENT IS THE EXCLUSIVE AND SOLE REMEDY OF THE PURCHASER. LABOR CHARGES ASSOCIATED WITH PARTS CHANGE-OVERS ARE NOT COVERED BY THIS WARRANTY. PROOF OF PURCHASE, SERIAL NUMBER, MODEL NUMBER AND DATE OF PURCHASE WILL BE REQUIRED ALONG WITH ALL PERTINENT INFORMATION OF THE ALLEGED DAMAGE.

This warranty applies only to the original purchaser and is not transferable. Claims under this warranty must be made directly to Batca Fitness Systems.

BATCA FITNESS SYSTEMS
1207 N. NEW HOPE ROAD
RALEIGH, NC 27610
(919) 255-1233

WWW.BATCAFITNESS.COM

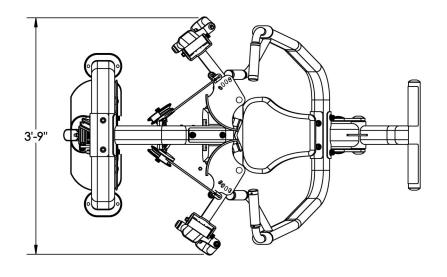

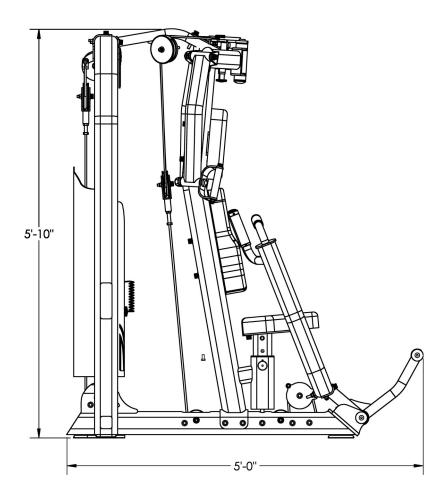

## LAYOUT DIAGRAM

The LD-1 has a layout dimension of 3'-9" (width)  $\times$  5'-0" (length)  $\times$  5'-10" (height). There should be a minimum of 18", preferably 24", of working space around the entire unit.